# **AtriCure**<sup>®</sup>

# cryolCE<sup>™</sup> cryo–ablation probe **Instructions for Use**

#### Use with the following cryo-ablation probe models: CRY03

### DESCRIPTION

- The AtriCure<sup>®</sup> cryolCE cryo—ablation system is comprised of: a. cryolCE cryo—ablation probe, CRYO3, (also referred to as PROBE) with Cryo1
- probe form tool b.
- Atricure<sup>®</sup> Cryo Module (ACM) or the AtriCure<sup>®</sup> ACC2 Cardiac Cryosurgical System (also referred to as ACC2) AtriCure<sup>®</sup> Cryo1 Accessory Kit (also referred to as Accessory Kit) if utilizing с.
- the ACC2 The Accessory Kit is comprised of:
- Nitrous Oxide Tank Heater
- Pressure Regulator Unit b.
- c Temperature Display Unit

# $\Delta$ caution

- The PROBE must be used with the AtriCure Cryo1 Accessory Kit if utilizing the ACC2. 2 This PROBE was designed for treatment of cardiac arrhythmias by achieving controlled
- temperatures down to -50° C to -70° C.
- This Instructions for Use document will cover use of the Crvo Ice crvo-ablation probe. form tool, and the Accessory Kit. The cryolCE cryo-ablation probe is a sterile, single-use cryosurgical instrument designed for use with the ACM or the ACC2 and the Accessory Kit. The Cryo1 form tool facilitates bending of the malleable tip.

NOTE: Users should be aware of known radio frequency (RF) sources and consider them when using a medical device. The AtriCure® cryoICE cryo-ablation system can be sensitive to electrostatic discharge (ESD) and RF emissions, which may temporarily reduce system performance

#### cryolCE™ cryo-ablation probe ILLUSTRATION AND NOMENCLATURE

Figure 1: cryoICE cryo-ablation probe and form tool



	Table 1. PROBE Nomenclature			
1.	Manifold	4. Rigid Shaft	7. Gas Inlet Connector	
2.	Temperature Connectors	5. Malleable Tip	8. Gas Exhaust Connector	
3.	Retractable Handle	6. Form Tool	9. Tubing	

## **BEFORE USING PRODUCT READ THE FOLLOWING** INFORMATION THOROUGHLY

**IMPORTANT!** 

This booklet is designed to assist in using this product. It is not a reference to surgical technique

#### INDICATION FOR USE

AtriCure's cryolCE™ cryo-ablation probe is indicated for use in the cryosurgical treatment of cardiac arrhythmias. The PROBE freezes target tissues, creating an inflammatory response (cryonecrosis) that blocks the electrical conduction pathway.

#### CONTRAINDICATIONS

There are no known contraindications.

# WARNINGS

- Please refer to the ACM User's Manual or the ACC2 Operation and Maintenance Manual for Console warnings, cautions, product description and features.
- The PROBE is only compatible with the ACM or ACC2 Cardiac Cryosurgical System. Use of the PROBE with another manufacturer's system may damage the device and result in patient injury.
- The PROBE must be used with the AtriCure Cryo1 Accessory Kit if utilizing the ACC2.
- Do not use the PROBE to freeze tissue inside the beating heart. Use of the PROBE to freeze tissue inside the beating heart may result in severe injury to the patient. 5
- Cryo-ablation involving coronary vessels has been associated with subsequent clinically significant arterial stenosis. It is unknown whether cryo-ablation with the PROBE will have such an effect, but as in all such procedures, care should be taken to minimize unnecessary contact with coronary vessels during cryo-ablation.
- Do not pull on the PROBE or console while the malleable tip is frozen to tissue as this 6. could lead to inadvertent tissue damage.
- Do not use excessive force when using the PROBE in order to avoid tissue damage. Cardiac surgical procedures may mechanically induce arrhythmias. 8
- 9 The PROBE should be positioned correctly and the placement of the malleable tip confirmed prior to cryo-ablation. Ensure there is no undesired tissue contact with he malleable tip or shaft during freezing, in order to avoid inadvertent tissue freezing.
- 10. The PROBE contains pressurized gas during operation. Discontinue use immediately if a breach in the PROBE is suspected, as this may result in release of pressurized gas and injury to the patient or the user.

- 11. Do not attempt to disconnect the PROBE during operation. The sudden release of pressure may cause the PROBE to recoil, which may injure the operator or patient.
- 17 Do not reprocess or reuse the PROBE. Reuse can cause patient injury and/or the communication of infectious disease(s) from one patient to another.
- 13 The Accessory Kit is not suitable for use in the presence of a flammable anesthetic mixture

# $\Delta$ cautions

- Read all instructions carefully for the PROBE prior to using the device. Failure to properly follow instructions may lead to injury and may result in improper functioning of the device.
- Use of the PROBE should be limited to properly trained and qualified medical personnel.
- To avoid damage to the device, do not drop or toss the PROBE. If the PROBE is dropped, do not use. Replace with a new PROBE.
- 4. Do not re-sterilize or reuse the PROBE.
- Do not use the PROBE if damaged in any way.
- 6 If the sterile package is damaged and/or the sterile barrier is breached, discard device and DO NOT USE.
- Follow standard guidelines for the safe handling and storage of high-pressure gas 7 tanks
- Do not remove or install PROBE unless the line and exhaust pressure gauge read "0" 8 psi if utilizing the ACC2.
- Do not remove or install PROBE from console unless the ACM is in the Stand-By Mode. g Nitrous oxide gas must be safely exhausted. Follow standard hospital guidelines for 10. allowable concentration levels.
- Do not restrict, kink, bend, clamp or otherwise damage PROBE tubing. 11.

# INSTRUCTIONS FOR USE

With the ACC2 and Accessory Kit: NOTE: Please refer to the ACC2 Operation and Maintenance Manual for Console instructions, product description and features.

NOTE: If the Accessory Kit has not been installed on the ACC2, please call AtriCure before proceeding.

- Turn the Freeze/Defrost Control Valve to the "Freeze" position.
- Turn the On/Off Control Valve to the "Off" position
- Plug in and turn "On" the Nitrous Oxide Tank Heater to ensure adequate tank pressure. Please refer to the CRYO1 Accessory Kit Installation Instructions for Nitrous Oxide Tank Heater
- Turn the Nitrous Oxide Cylinder (Tank) Valve fully counter-clockwise to open.
- Examine the packaging of the device to ensure the sterility of the product has not been breached. Remove the sterilized instrument from its package per standard sterile technique
- Connect the PROBE Gas Inlet Connector to the Pressure Regulator. See Figure 6.

#### Figure 2: PROBE Connections to ACC2



Table 2. PROBE Connections to ACC2								
ltem Number	Connect ACC2 Item	To Probe:						
1	Pressure Regulator	PROBE Gas Inlet Connector						
2	Exhaust Probe Socket NOTE: Use the Exhaust Probe Socket located above the Pressure Regulator	PROBE Gas Exhaust Connector						
3	Temperature Display Unit Connectors	Match Color coded Temperature connectors to the matching colored PROBE connectors						

- Connect PROBE Gas Exhaust Connector to the appropriate ACC2 Exhaust Probe Socket. To engage Exhaust Probe Socket, slide retainer ring back on quick disconnect while inserting plug, then release
- Confirm PROBE connectors are fully engaged by lightly pulling on connections. 8 Connect Temperature Connectors of the PROBE to the corresponding colored 9
- connectors on the Temperature Display Unit. See Figure 2: PROBE Connections to ACC2. 10. Switch the Temperature Display Unit "On". The Temperature Display Unit will now display the PROBE temperature
- NOTE: When connected correctly, the Temperature Display Unit will display current PROBE temperature.
  - 11. For a cryoICE device, retract handle and rigid shaft to expose malleable aluminum probe.

#### Figure 3: Handle and Rigid Shaft Retraction.



The Maximum Freeze Control Valve must be set to "Maximum Freeze"

12. Turn the Maximum Freeze Control Valve to the "Maximum Freeze" position.

# $\Delta$ caution

During the Pre-Freeze, if there are leaks in the Pressure Regulator Unit the sound of gas leaking will be heard, and/or frost will appear on the connections. Replace the Pressure Regulator before continuing with the procedure.

P001259.B

13. Perform a "Pre-Freeze" by turning the **On/Off Control Valve** to the "On" position while the probe is in air.

IMPORTANT: The PROBE must be operated at a pressure of 700 psi or higher.

- 14. Thirty seconds after frost appears on the malleable probe tip:
  - a. Turn the Freeze/Defrost Control Valve to the "Defrost" position. Turn the On/Off Control Valve to the "Off" position. Prior to bending the malleable
- tip or shaft always ensure the **On/Off Control Valve** is in the "Off" position. With the On/Off Control Valve set to the "Off" position, turn the Freeze/Defrost Control Valve to the "Freeze" position.
- NOTE: Ensure the Line Pressure Gage and Exhaust Pressure Gage read 0 psi prior to bending

## the PROBE

- 16. If bending of the malleable tip is required always use the form tool. Refer to the section labeled: "Bending PROBE Malleable Tip". If bending of the shaft is required refer to the section labeled: "Bending PROBE Shaft".
- Identify and expose the sites to be cryoablated using standard surgical techniques. 17.
- 18 Place the malleable tip against the targeted tissue under direct visualization by the surgeon
- NOTE: Ensure the malleable tip temperature is above 0°C before contacting tissue.
- NOTE: Ensure targeted tissue is in contact with the malleable tip prior to freezing.
- NOTE: Ensure there is no undesired tissue contact with the malleable tip or shaft.
- NOTE: Do not use excessive force when using the PROBE in order to avoid tissue damage.
- 19. Turn the On/Off Control Valve to the "On" position.
- a. Check the  ${\bf Line}~{\bf Pressure}~{\bf Gauge}$  to ensure line pressure of 700 psi or greater has been maintained.
- NOTE: Movement of PROBE prior to tissue adhesion may affect freezing. Cryoadhesion occurs when malleable tip temperature is below 0°C.

NOTE: Failure for PROBE to reach desired temperature is discussed further under the section labeled: "FREQUENTLY ASKED QUESTIONS".

- 20. Freeze for desired length of time
- Turn the Freeze/Defrost Control Valve to the "Defrost" position until PROBE 21. temperature warms to greater than 0°C

NOTE: If PROBE does not reach desired Defrost temperature, apply warm sterile saline to the tissue and probe area as necessary

22. Remove PROBE from targeted tissue

# $\Delta$ caution

26. 

read "0" psi.

с.

d.

e.

With the ACM

and features.

29

30.

31.

Turning the On/Off Control Valve to the "Off" position followed by turning the Freeze/ Defrost Valve to the "Freeze" position can cause sufficient cooling to cause cryo-adhesion. Turn the On/Off Control Valve to the "Off" position. 23.

Do not remove or install PROBE from console unless the line and exhaust pressure gauge

b. Turn the Nitrous Oxide Cylinder (Tank) Valve fully clockwise to close. Turn On/Off valves "On" and "Off" repeatedly to relieve system pressure until

Disconnect the PROBE from the ACC2 and discard the PROBE after use. Follow local governing ordinances and recycling plans regarding disposal or recycling

Switch "Off" and unplug the Nitrous Oxide Tank Heater from the wall outlet.

NOTE: Please refer to the ACM User's Manual for Console instructions, product description

28. Follow the setup installation instructions for proper setup of the ACM per the User's Manual.

Turn the Nitrous Oxide Cylinder (Tank) Valve fully counter-clockwise to open.

Examine the packaging of the device to ensure the sterility of the product has not been

breached. Remove the sterilized instrument from its package per standard sterile technique.

Connect the PROBE Gas Inlet Connector to the Gas inlet Connection Port

Table 3. PROBE Connections to ACM

To Probe:

PROBE Gas Inlet Connector

PROBE Gas Exhaust Connector

Match Color coded Temperature

connectors to the matching colored PROBE connectors

**Connect ACM Item** 

Gas Inlet Connection Port

Thermocouple Port

Gas Exhaust Connection Port

24. Turn the Freeze/Defrost Valve to the "Freeze" position to vent the PROBE

Repeat steps 14 thru 23 as desired to create additional cryo lesions.

25. Wipe the malleable tip clean.

27. Upon completion of the surgical procedure: a. Switch "Off" the Temperature Display Unit.

all pressure gauges read "0" psi.

of device component

Figure 4: PROBE Connections to ACM

2

Item

Number

2

3

 $\Delta$  caution

- 32. Connect PROBE Gas Exhaust Connector to the Gas Exhaust Connection Port. To engage Exhaust Probe Socket, slide retainer ring back on quick disconnect while inserting plug, then release.
- Confirm PROBE connectors are fully engaged by lightly pulling on connections.
- Connect Temperature Connectors of the PROBE to the corresponding colored 34. connectors on the ACM. See Figure 4: PROBE Connections to ACM.

35. Switch the ACM unit ON.

NOTE: When connected correctly, the ACM will display current PROBE temperature. If not connected, the ACM will display F-H.

36. For a cryoICE device, retract handle and rigid shaft to expose malleable aluminum probe. See Figure 3: Handle and Rigid Shaft Retraction.

IMPORTANT: Do not use the PROBE in the Temperature Control mode. The Handpiece

Probe Temperature Control must be set full open (turn counterclockwise until it stops). 37. Perform a "Pre-Freeze" by cycling the ACM using the activation button or footswitch while the probe is in air.

IMPORTANT: The PROBE must be operated at a pressure of 700 psi or higher.

- 38. Thirty seconds after frost appears on the malleable probe tip:
- a. Cycle the ACM to defrost.

#### b. Cycle the ACM to vent the probe

- 39 Identify and expose the sites to be cryoablated using standard surgical techniques. 40 If bending of the malleable tip is required always use the form tool. Refer to the section labeled: "Bending PROBE Malleable Tip". If bending of the shaft is required refer to the section labeled: "Bending PROBE Shaft".
- 41. Place the malleable tip against the targeted tissue under direct visualization by the surgeon. NOTE: Ensure the malleable tip temperature is above 0°C before contacting tissue.
- NOTE: Ensure targeted tissue is in contact with the malleable tip prior to freezing NOTE: Ensure there is no undesired tissue contact with the malleable tip or shaft.

NOTE: Do not use excessive force when using the PROBE in order to avoid tissue damage. 42. Press the activation button or footswitch to begin freezing.

NOTE: Movement of PROBE prior to tissue adhesion may affect freezing. Cryoadhesion

occurs when malleable tip temperature is below 0°C. NOTE: Failure for PROBE to reach desired temperature is discussed further under the section

labeled: "FREQUENTLY ASKED OUESTIONS"

43. Freeze for desired length of time 44. Defrost the probe by either

a. Allowing the ACM to automatically enter the Defrost mode

#### b. Or by cycling the activation button or foot pedal.

45. Once the PROBE temperature warms greater than 0°C remove PROBE from targeted tissue. NOTE: If PROBE does not reach desired Defrost temperature, apply warm sterile saline to the tissue and probe area as necessary.

Cycle the activation button or foot pedal to vent the probe. 46.

# CAUTION

Venting the probe can cause sufficient cooling to cause cryo-adhesion. 47.

Wipe the malleable tip clean. 48. Repeat steps 38 thru 46 as desired to create additional cryo lesions.

Do not remove or install PROBE from console unless the ACM is in the Stand-By Mode 49. Upon completion of the surgical procedure:

- a. Turn the Nitrous Oxide Cylinder (Tank) Valve fully clockwise to close. Pull the red pressure relief knob on the rear panel of the ACM to depressurize b.
- the ACM. Disconnect the PROBE from the ACM and discard the PROBE after use. с. Follow local governing ordinances and recycling plans regarding disposal or recycling of device component.
- d. Switch "Off" the ACM.

BENDING

### Bending PROBE Malleable Tip

 $\angle!$  caution

Repetitive bends in the same location could cause damage to the malleable tip. After each bend re-straighten the PROBE malleable tip prior to creating the next bend. If the same bend is desired in a different plane, do not rotate the PROBE malleable tip; re-straighten the PROBE malleable tip and create the same bend in the desired plane.

The PROBE malleable tip has a limited functional life. It is always recommended to use the Cryo1 form tool to create desired bends. The Cryo1 form tool has two ends, the smaller end radius is 13 mm and the larger end radius is 26 mm. See Table 1, located in the section labeled: "PROBE Nomenclature"

# $\Delta$ caution

- The PROBE malleable tip should not be bent into a radius of less than 13 mm (0.5 inches). Typical procedures may require the following bend profiles created with the use of the
- Cryo1 form tool:

Figure 5



Bending 26mm





#### **Bending PROBE Shaft**

# $\angle!$ CAUTION

Repetitive bends in the same location could cause damage to the shaft. The probe shaft has limited functional life

# 

The distal end of the PROBE shaft should not be bent more than 5 cm (2.0 inches) from straight.

2. Typical procedures may require the following bend profile:

Figure 6



2 00 inches

#### FREQUENTLY ASKED QUESTIONS FOR USE WITH THE ACC2

Question		Answer		Solution
1.	Why is the PROBE not reaching the proper temperature?	a.	Inadequate inlet pressure	Turn on Nitrous Oxide Tank Heater Replace low or empty nitrous oxide tank
		b.	Gas not flowing/ Tubing is restricted	Verify tubing is not pinched
		C.	Freeze/Defrost valve not turned completely to "Freeze" position	Turn Freeze/Defrost valve completely to "Freeze" position
		d.	Maximum Freeze control valve not set to "Maximum Freeze" position	Turn Maximum Freeze control valve to "Maximum Freeze" position
		e.	Leak in malleable tip or tubing	Replace with new probe
		f.	Nitrous oxide cylinder (tank) valve closed	Fully open nitrous oxide cylinder (tank) valve
		g.	Malleable tip is bent to radius less than 13 mm	Form malleable tip to radius of 13 mm or larger
2.	Why does the Temperature Display Unit stay at the setup screen or not turn on	a.	Batteries are low	Replace both 9 volt batteries
3.	Why does the Temperature Display Unit read "OPEN"?	a.	The PROBE connectors are partially, or not plugged into the Unit	Plug the PROBE connectors all the way into the Temperature Display Unit
		b.	PROBE Temperature Connector wires are broken	Replace PROBE
4.	Why does the Temperature Display Unit read a positive number during cryo- ablation?	a.	The PROBE connectors are plugged into the Temperature Display Unit, but they are reversed	Reverse the PROBE connectors to match the appropriate color coded connectors on the Temperature Display Unit
5.	What are the <b>SEL</b> and <b>RST</b> buttons on the Temperature Display Unit used for?	a.	Not used, both buttons are disabled	Not used, both buttons are disabled
6.	Why does the Nitrous Oxide Tank Heater power light not turn on?	a.	Nitrous Oxide Tank Heater not receiving power	Ensure unit is plugged in

#### FREQUENTLY ASKED QUESTIONS FOR USE WITH THE ACM

Question	Answer	Solution
1. Why is the PROBE not reaching the proper	a. Inadequate inlet pressure	Replace low or empty nitrous oxide tank
temperature?	b. Gas not flowing/ Tubing is restricted	Verify tubing is not pinched
	c. Handpiece probe temperature adjust knob is not completely turned counter-clockwise	Turn Handpiece probe temperature adjust knob completely counter- clockwise
	d. Leak in malleable tip or tubing	Replace with new probe
	e. Nitrous oxide cylinder (tank) valve closed	Fully open nitrous oxide cylinder (tank) valve
	f. Malleable tip is bent to radius less than 13 mm	Form malleable tip to radius of 13 mm or larger
<ol> <li>Why does the ACM unit display "E-H"?</li> </ol>	a. The PROBE Temperature connectors are partially, or not plugged into the Unit	Plug the PROBE Temperature connectors all the way into the Thermocouple port
	b. PROBE Temperature Connector wires are broken	Replace PROBE
<ol> <li>Why does the ACM read a positive number during cryo-ablation?</li> </ol>	a. The PROBE Temperature connectors are plugged into the ACM, but they are reversed	Reverse the PROBE Temperature connectors to match the appropriate color coded connectors on the ACM
<ol> <li>Why does the ACM display a fault code, error code, maintenance needed, or low pressure cylinder light?</li> </ol>	a. See ACM User's Manual for Trouble Shooting	See ACM User's Manual for Trouble Shooting

#### HOW SUPPLIED

The PROBE is supplied as a sterile instrument and is for single patient use only. Sterility is guaranteed unless the package is opened or damaged.



Do not reprocess or reuse. Reuse can cause patient injury and/or the communication of infectious disease(s) from one patient to another.

#### **RETURN OF USED PRODUCT**

If for any reason this product must be returned to AtriCure, Inc., a return goods authorization (RGA) number is required from AtriCure, Inc., prior to shipping.

If the product has been in contact with blood or body fluids, it must be thoroughly cleaned and disinfected before packing. It should be shipped in either the original carton or an equivalent carton, to prevent damage during shipment; and it should be properly labeled with an RGA number and an indication of the biohazardous nature of the contents of shipment.

Instructions for cleaning and materials, including appropriate shipping containers, proper labeling, and an RGA number may be obtained from AtriCure. Inc.

#### DISCLAIMER STATEMENTS

Users assume responsibility for approving the acceptable condition of this product before it is used, and for ensuring that the product is only used in manner described in these instructions for use, including, but not limited to, ensuring that product is not re-used.

Under no circumstances will AtriCure, Inc. be responsible for any incidental, special or consiquential loss, damage, or expense, which is the result of the deliberate misuse or re-use of this product, including any loss, damage, or expense which is related to personal injury or damage to property

#### EXPLANATION OF SYMBOLS ON PACKAGE LABELING

Refer to the outer package label to see which symbols apply to this product.



Manufactured by: AtriCure Incorporated 7555 Innovation Wav Mason, Ohio 45040 USA Customer Service: 1-866-349-2342 (toll free) 1-513-755-4100 (phone)

